







Can be used for any type of pickup.


The Hot lead to IN

The Ground lead to OUT—Simple!

Shielding wires to any ground point, if present

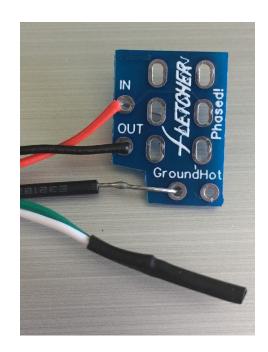

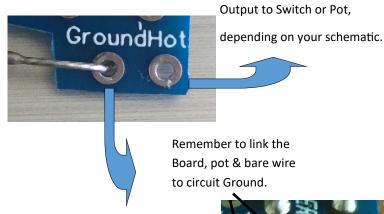

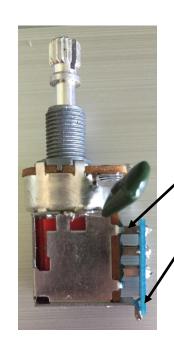

Leave a gap between the board and the pot base when soldering.

Bend back the metal tag and solder this to the board Ground.

www.fletcherpickups.co.uk ben@fletcherpickups.co.uk